



**\*\* Note v2f or above firmware is required to be installed in the RD11 \*\***

**Set-up Instructions:**

Connect the RD11 and RD12 as per diagram.  
 Apply power to the two units, wait for RD11 to boot up.  
 Hold down 'Menu' button until menu page appears.  
 Press the 'UP' button until displays 'Setup RD12'  
 Press 'ok' button.  
 Units will check if comms link is ok.  
 Display will now show 'Set RD12 Mode'  
 Use 'UP' and 'Down' buttons to select the protocol required.  
 Once selected press 'ok' button  
 Now select the head number you require the camera to be on your system.  
 If head number is 1 then press 'ok' button.  
 now press the 'Down' button until 'Menu Exit' appears, press the 'ok' button.  
 RD11 and RD12 are now camera protocol linked.

David Bradley Engineering Ltd

UNLESS OTHERWISE SPECIFIED:  
 DIMENSIONS ARE IN MILLIMETERS  
 SURFACE FINISH: 32  
 TOLERANCES: ANGULAR: ±0.1  
 LINEAR: ±0.25 0± ±0.1 00± ±0.01

RD12 Set-up

TITLE:

RD12 Camera Protocol  
 Configuration instructions

NAME	SIGNATURE	DATE	MATERIAL	DWG NO.	A4
DRAWN	PM				
CHK'D			THIRD ANGLE PROJECTION	Scale 1:1	SHEET 1 OF 1